

II 4324

FLOOR LAMP ASSEMBLY INSTRUCTIONS

These instructions are provided for your safety. Please read carefully before commencing work and retain for future reference.


SAFETY INFORMATION

- * The supply cable runs through the inside of this product. Take care not to place undue stress on the cable whilst unpacking to prevent the possibility of a poor connection.
- * If you are in any doubt consult a person competent to give advice on the assembly of electrical equipment.
- * If the external flexible cable of the lamp is damaged it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- * Always be sure to use the correct type and wattage of bulbs as indicated on the fitting. Do not exceed the wattage stated.
- * When changing the bulb, always unplug from the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.

ASSEMBLY INSTRUCTIONS

- Unpack the product and remove all packaging. Take care not scratch the surface of
 the poles whilst removing the plastic wrapping. Ensure the ends of the poles or the
 plug do not scratch base. Lay the product out on the floor, having previously covered
 it with a soft cloth to avoid damage to the flooring and product finish. Assembly
 should take place with the product lying flat.
- Screw the centre pole into the upper lamp holder section. Ensuring the poles are kept parallel, hold the lamp holder section still and rotate only the centre pole taking care not to twist the wiring or cross thread
- 3. Carefully rotate the base plate onto the lower pole section until tight and then place in a vertical position on the floor
- 4. Lift the lamp holder section and locate onto the assembled base sections whilst at the same time gently pulling any slack electrical cable through the base plate until the pole sections meet. The underside of the centre pole has locating dowels which locate into recesses on the lower pole section Note: The dowels are only designed to fit into the recesses in a pre-defined orientation to give the tree its natural curvature. Fit and tighten the single securing screw into the recessed screw-way located in the lower pole section to lock the assembly in place as shown in figure
- 5. A saddle-clamp cable restraint is located on the underside of the base section. Place the floor lamps electrical supply cable between the clamp, fold the plastic arm of the restraint over the cable and tighten the cross-head screw to secure the cable in place. Care must be taken not to damage the wiring.
- 6. With the floor lamp stood in the upright position check the connections you have made to ensure the lamp is sturdy.
- 7. **Fit the shade** by first removing the plastic shade ring already attached to the lampholder Fit the shade and then refit the shade ring to secure in place. Do not overtighten as this may result in damage. The lamp holder neck is on a pivoting joint to allow the shade to be centred.
- 8. **Fitting the bulb** Wattage and type as indicated on the fitting. Do not exceed the maximum wattage. Ensure that the lamp is turned off at the switch prior to replacing the bulbs. When changing the bulb, always unplug from the mains supply and allow the old bulb to cool down before handling. Dispose of used bulbs carefully

Your lamp is now ready to be plugged in into the mains supply.

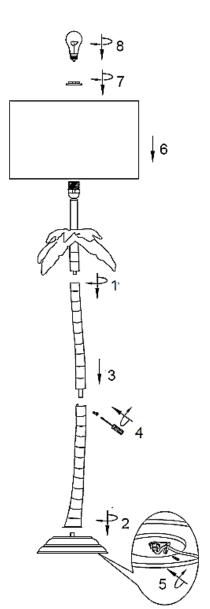



IL4324

GENERAL INFORMATION

This product is designed for internal use only. Do not use polish or abrasive cleaner – just a soft dry cloth.

To register your product for an extended five-year warranty, please complete the simple form at

www.darlighting.co.uk/warranty

You'll need to fill in the details of the product, the retailer you purchased it from, and also the installer and the installation. Please also upload a clear copy of the original purchase invoice or receipt to complete this registration.

UK: där Lighting Ltd, Wildmere Road,Banbury, Oxon, OX16 3JZ **Ireland & EU**: Dar Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road, Sandyford Industrial Estate, Dublin 18