



IL4242

## TABLE / FLOOR LAMP

These instructions are provided for your safety.  
Please read carefully before commencing work and retain for future reference.

### SAFETY INFORMATION

- \* The supply cable runs through the inside of the lamp. Take care not to place undue stress on the cable whilst unpacking to prevent the possibility of a poor connection.
- \* If you are in any doubt consult a person competent to give advice on the assembly of electrical equipment.
- \* If the external flexible cable of the lamp is damaged it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- \* To prevent electrocution switch off at the mains supply before assembling or maintaining this product. Ensure the plug is not connected to any power supply and read instructions before assembly.
- \* Always be sure to use the correct type and wattage of bulbs as indicated on the fitting. Never exceed the wattage stated.
- \* When changing the bulb, ensure product is unplugged and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.

### ASSEMBLY INSTRUCTIONS


1. Unpack floor lamp and remove all packaging material. Be careful that you do not scratch surface of the stems whilst removing wrapping.
2. Where required remove the plastic / cardboard cable protectors that are fitted at cable entry points inside stems and floor lamp base.
3. Screw the top stem clockwise into lampholder section. ① Take care to hold stem parallel to avoid cross threading. Hold lampholder section still, only rotate top stem, so as not to twist the cable.
4. Screw middle stem clockwise into top stem. ② Take care to hold stems parallel to avoid cross threading. Hold the top stem still and only rotate the middle stem, so as not to twist the cable.
5. Screw lower stem clockwise into middle stem. ③ Take care to hold stems parallel to avoid cross threading. Hold the upper stems still and only rotate the lower stem, so as not to twist the cable.
6. Gently pull the cable out of the base, offer the base onto the lower stem and rotate the base onto the lower stem ④ whilst make sure threads do not cross, if in doubt undo and start again. **Ensure all assembled sections are fully tightened.**
7. Stand the floor lamp upright then make sure the assembled parts are sufficiently tightened.
8. Screw the threaded stem onto top section ⑤ then lock this into position using a spanner on the nut attached. **(Ensure short end is attached approx.5mm)**
9. Offer shade onto threaded stem ⑥, attach the crown ⑦ then secure these parts into position using finial. ⑧
10. Fit bulb: type and wattage as indicated on fitting. ⑨ **The wattage indicated must not be exceeded.**
11. Your floor lamp is now ready for use.

Please retain this information leaflet for future reference

### **GENERAL INFORMATION**

This floor / table lamp is designed for internal use only.  
**Do not use polish or an abrasive cleaner - just a soft dry cloth.**

IL4242

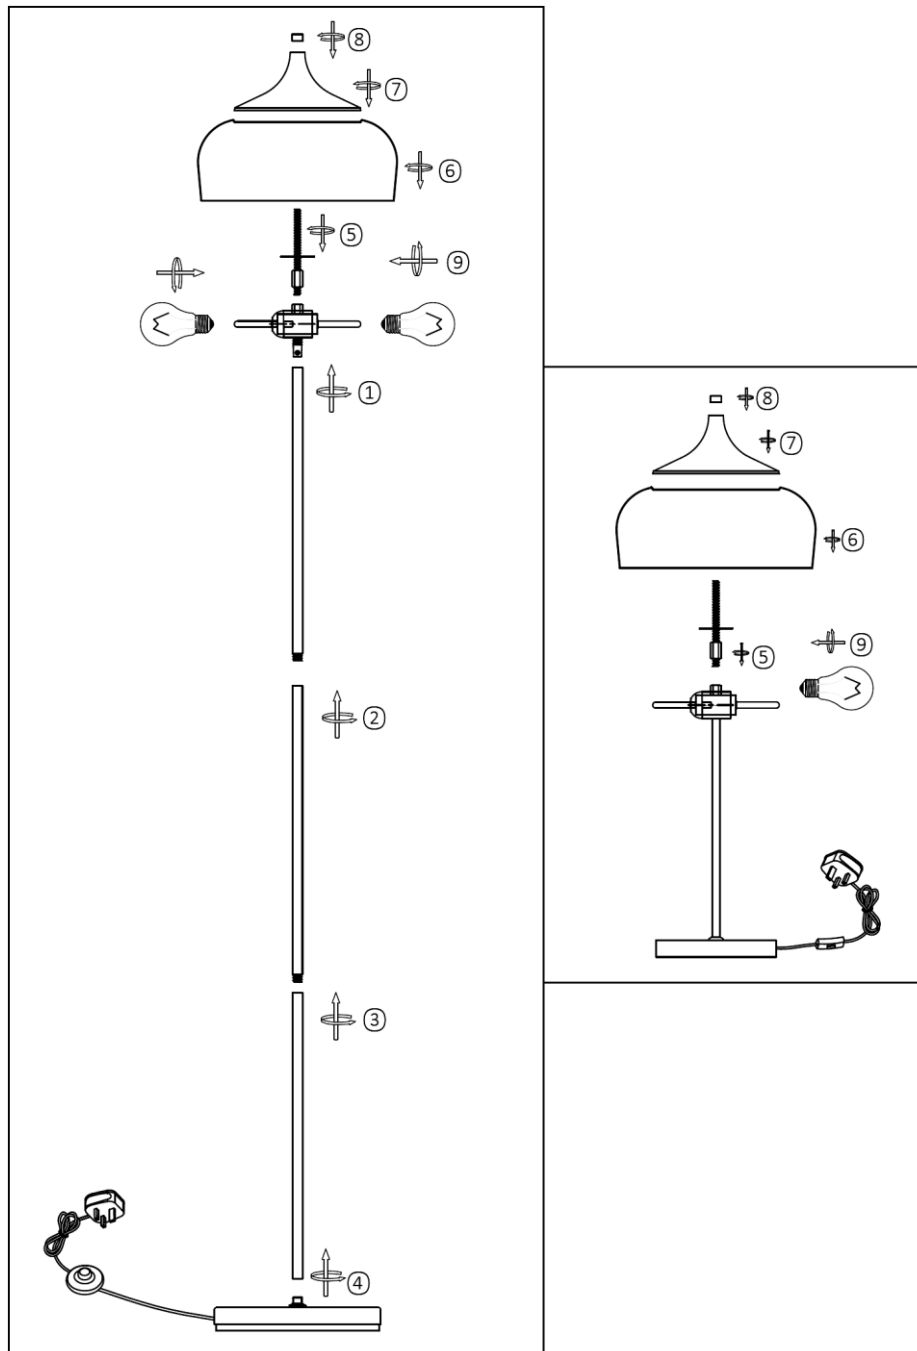

To register your product for an extended five-year warranty, please complete the simple form at

[www.darlighting.co.uk/warranty](http://www.darlighting.co.uk/warranty)

You'll need to fill in the details of the product, the retailer you purchased it from, and also the installer and the installation. Please also upload a clear copy of the original purchase invoice or receipt to complete this registration.

**UK:** där Lighting Ltd, Wildmere Road, Banbury, Oxon, OX16 3JZ

**Ireland & EU:** Dar Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road, Sandyford Industrial Estate, Dublin 18