

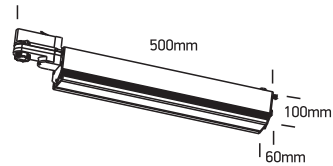
 
INSTALLATION MANUAL

65026T

ecotrackspot

80 CRI


40W | SMD 2835 | 230V | 50/60Hz | IP20 | Aluminium + plastic | Adjustable
Complete with 1000mA driver.


one
LIGHT


| | | |
|--|---|--|
| <p>1</p> <p>To mount the track adaptor into the track system, first check that the selector knob A is at OFF position and the adaptor lock B is disengaged.</p> | <p>2</p> <p>When installing the adaptor into the track, ensure that it is orientated correctly.</p> | <p>3</p> <p>Rotate adaptor lock B clockwise 90° to connect the adaptor to the neutral circuit.</p> |
| <p>4</p> <p>After the track adaptor is inserted, close the security button on the adaptor.</p> | <p>5</p> <p>Rotate selector knob A to the position of desired circuit.</p> | <p>5a</p> <p>Circuit 1: Rotate the knob A 90° clockwise from the starting position OFF, to connect circuit 1.</p> |
| <p>5b</p> <p>Circuit 2: Rotate the knob A 90° anti-clockwise from the starting position OFF, to connect circuit 2.</p> | <p>5c</p> <p>Circuit 3: Rotate the knob A 180° clockwise from the starting position OFF, to connect circuit 3.</p> | <p>6</p> <p>Adjust the light to the direction you need.</p> |

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.