

# INSTALLATION MANUAL

## 65026T

ecotrackspot




±45°  
ADJUSTABLE


80  
CRI



40W | SMD 2835 | 230V | 50/60Hz | IP20 | Aluminium + plastic | Adjustable  
Complete with 1000mA driver.

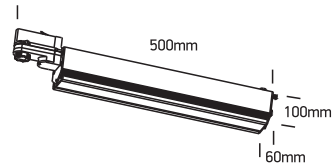

one  
LIGHT

 

<p><b>1</b></p> <p>To mount the track adaptor into the track system, first check that the selector knob <b>A</b> is at OFF position and the adaptor lock <b>B</b> is disengaged.</p>	<p><b>2</b></p> <p>When installing the adaptor into the track, ensure that it is orientated correctly.</p>	<p><b>3</b></p> <p>Rotate adaptor lock <b>B</b> clockwise 90° to connect the adaptor to the neutral circuit.</p>
<p><b>4</b></p> <p>After the track adaptor is inserted, close the security button on the adaptor.</p>	<p><b>5</b></p> <p>Rotate selector knob <b>A</b> to the position of desired circuit.</p>	<p><b>5a</b></p> <p><b>Circuit 1:</b> Rotate the knob <b>A</b> 90° clockwise from the starting position OFF, to connect circuit 1.</p>
<p><b>5b</b></p> <p><b>Circuit 2:</b> Rotate the knob <b>A</b> 90° anti-clockwise from the starting position OFF, to connect circuit 2.</p>	<p><b>5c</b></p> <p><b>Circuit 3:</b> Rotate the knob <b>A</b> 180° clockwise from the starting position OFF, to connect circuit 3.</p>	<p><b>6</b></p> <p>Adjust the light to the direction you need.</p>

### Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.