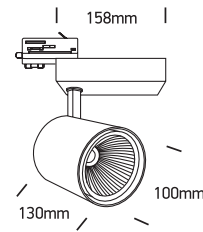


# INSTALLATION MANUAL

## 65619T

**ecotrackspot**


38W | 230V | 50/60Hz | IP20 | Aluminium | Adjustable

Complete with driver.

**80 CRI**

<p><b>1</b></p> <p>To mount the track adaptor into the track system, first check that the selector knob <b>A</b> is at OFF position and the adaptor lock <b>B</b> is disengaged.</p>	<p><b>2</b></p> <p>When installing the adaptor into the track, ensure that it is orientated correctly.</p>	<p><b>3</b></p> <p>Rotate adaptor lock <b>B</b> clockwise 90° to lock the adaptor into the track system.</p>
<p><b>4</b></p> <p>Rotate selector knob <b>A</b> to the desired position circuit.</p>	<p><b>4a</b></p> <p><b>Circuit 1:</b> To connect on circuit 1, from OFF position, rotate the knob <b>A</b> clockwise to position 1.</p>	<p><b>4b</b></p> <p><b>Circuit 2:</b> To connect on circuit 2, from OFF position, rotate the knob <b>A</b> anti-clockwise to position 2.</p>
<p><b>4c</b></p> <p><b>Circuit 3:</b> To connect on circuit 3, from OFF position, rotate the knob <b>A</b> to position 3.</p>	<p><b>5</b></p>	

### Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.