

# INSTALLATION MANUAL


## 65624T

**ecotrackspot**

**Ra>80**  
ADJUSTABLE


35W | 230V | 50/60Hz | IP20 | Die cast | Adjustable

Complete with driver.

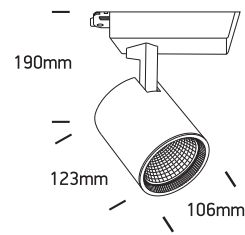

<p><b>1</b></p> <p>To mount the track adaptor into the track system, first check that the selector knob <b>A</b> is at 0 position and the adaptor lock <b>B</b> is disengaged.</p>	<p><b>2</b></p> <p>When installing the adaptor into the track, ensure that it is orientated correctly.</p>	<p><b>3</b></p> <p>Rotate adaptor lock <b>B</b> clockwise 90° to lock the adaptor into the track system.</p>
<p><b>4</b></p> <p>Rotate selector knob <b>A</b> to the desired position circuit.</p>	<p><b>4a</b></p> <p><b>Circuit 1:</b> To connect on circuit 1, from 0 position, rotate the knob <b>A</b> fully clockwise to position 1.</p>	<p><b>4b</b></p> <p><b>Circuit 2:</b> To connect on circuit 2, from 0 position, rotate the knob <b>A</b> fully anti-clockwise to position 2.</p>
<p><b>4c</b></p> <p><b>Circuit 3:</b> To connect on circuit 3, from 0 position, rotate the knob <b>A</b> to position 3.</p>	<p><b>5</b></p> <p>350° 90°</p>	

### Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.