

# INSTALLATION MANUAL


67396A

**ecolight**



80  
CRI

230V | SMD 2835 | 6W | IP65 | Sensor | ABS + PC

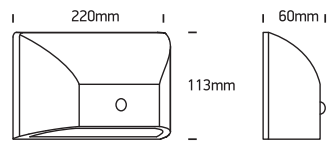

|                 |  |
|-----------------|--|
| <p><b>A</b></p> | <p><b>B</b></p>  |
| <p><b>C</b></p> | <p><b>D</b> Sensitivity Configuration and Time delay</p> <p>ON</p> <p>*SENSITIVITY</p> <p>Time Delay</p> <p>* OFF High sensitivity ON Low sensitivity<br/>Move switch to ON position to adjust time delay.</p> |
| <p><b>E</b></p> | <p><b>F</b></p>  |

**Warnings:**

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.